





Allgood push / kick plates and signage are durable and require little maintenance. However, a frequent check should ensure that the items are firmly attached to the doors.

• Check the kick/push plates and signage for dirt and grease and wipe clean as directed in the 'Care of finishes' section (page 2).

nonthly checks

• Check that the fixings are tight and that there is no movement of the push/kick plate or signage. if the items are loose, please tighten the relevant fixings (Fig.5 & 6).

www.allgood.co.uk O&M Manual - 5