

# Fixing Instructions for: Quadaxial lever furniture - Alite


FI500A  
Issue 02-09/25

**@lgood**  
QUALITY SINCE 1948


## Items supplied with Quadaxial Lever Furniture




## Items supplied with 9990 locks

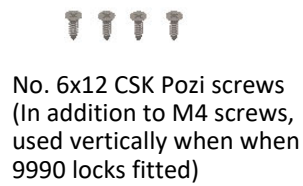

## Items supplied with XX9561 Kit

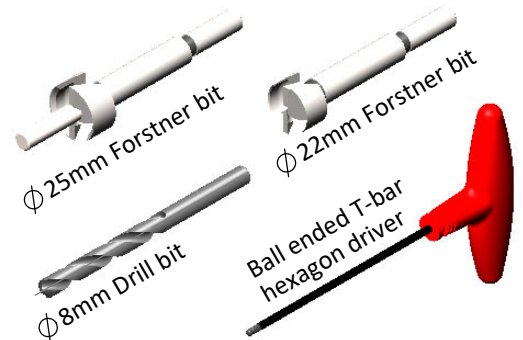



Door prepped with  
Ø 25 hole using lock  
fitting instructions

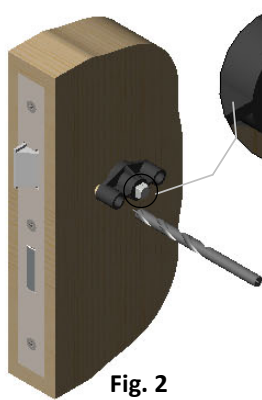


Jig located into Ø 25 hole & over 8mm  
SQ spindle to drill Ø 8 holes at 38 CRS  
from both sides of door (ensuring drill  
does not hit the lock, or spot through  
approx. 7-8mm deep, remove lock and  
drill through to lock pocket both sides)





Holes at 38 CRS for  
BB fixing

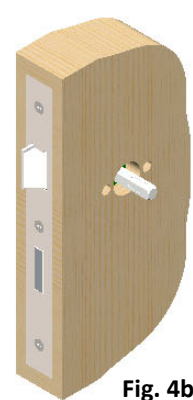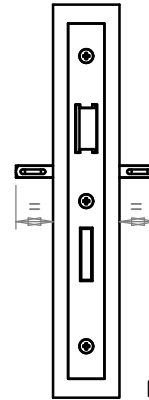




Spindle passed through  
lock follower leaving equal  
projection to both sides

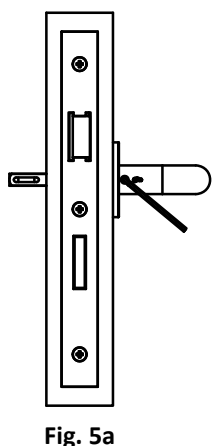

Insert & tighten Grub screw  
to one half of lever assy. to  
hold spindle central

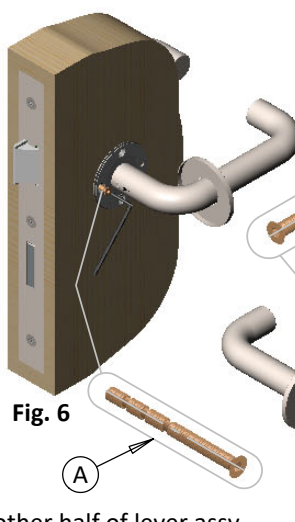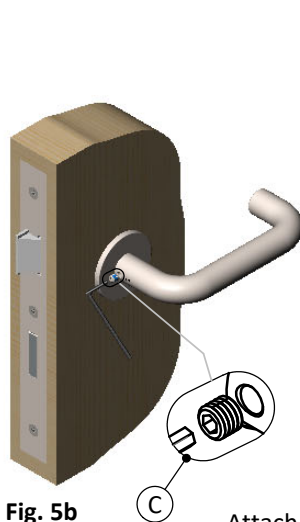

Attach other half of lever assy.  
to other side of door, slide off  
covers, insert & tighten M4  
screws back to back both sides,  
press covers firmly against door

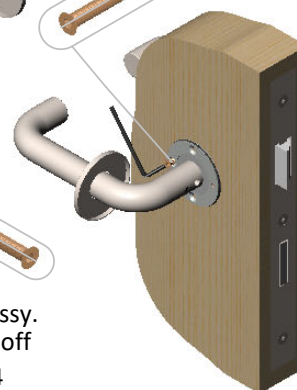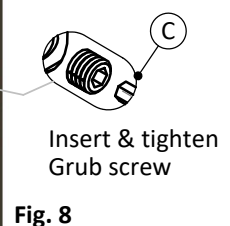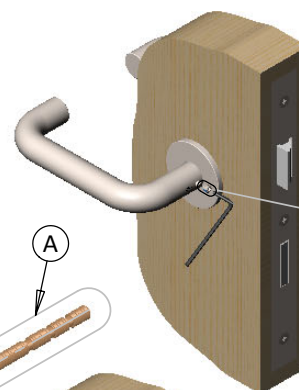

Completed  
installation



Recycle responsibly