

# Fixing Instructions for: Quadaxial lever furniture: Continental

FI500C


Issue 02-09/25

**@lgood**  
QUALITY SINCE 1948


## Items supplied with Quadaxial Lever Furniture




## Items supplied with 9990 locks

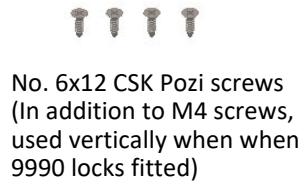

## Items supplied with XX9561 Kit

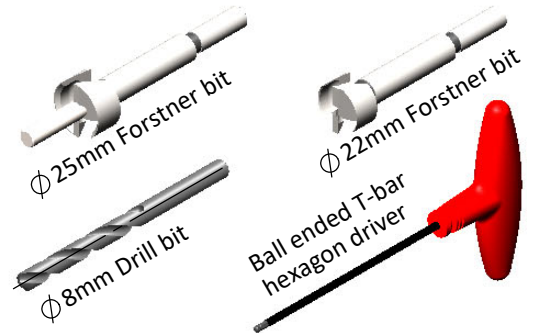


Door prepped with  
Ø25 hole using lock  
fitting instructions

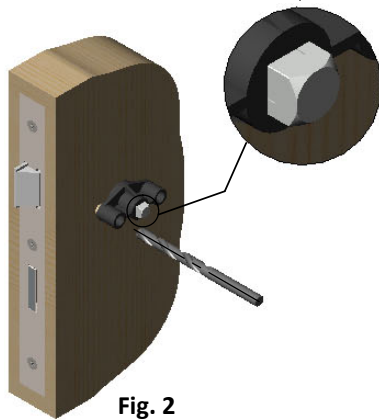


Jig located into Ø25 hole & over 8mm  
SQ spindle to drill Ø8 holes at 38 CRS  
from both sides of door (ensuring drill  
does not hit the lock, or spot through  
approx. 7-8mm deep, remove lock and  
drill through to lock pocket both sides)




Holes at 38 CRS for  
BB fixing

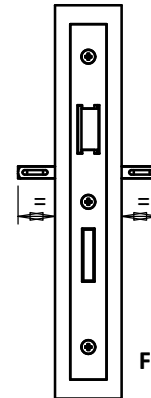


Spindle passed through  
lock follower leaving equal  
projection to both sides

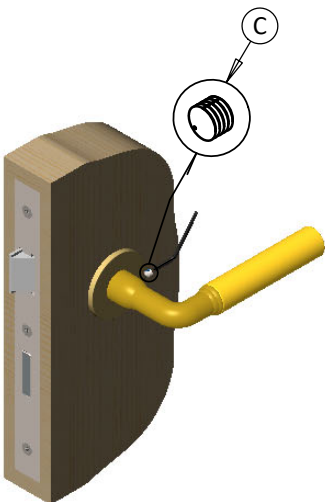

Insert & tighten Grub screw  
to one half of lever assy. to  
hold spindle central

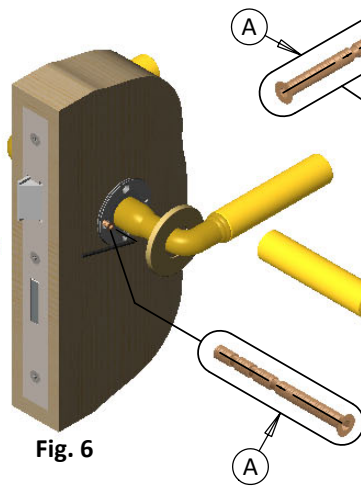


Attach other half of lever assy.  
to other side of door, slide off  
covers, insert & tighten M4  
screws back to back both sides,  
press covers firmly against door

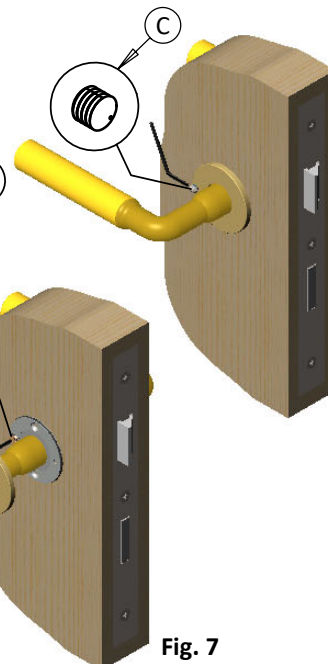

Insert & tighten  
Grub screw

**Fig. 8**

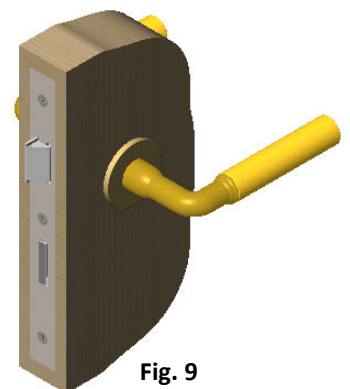

Completed  
installation



Recycle responsibly