

Fixing Instructions for: Quadaxial lever furniture: Modric Contego, Mode, Sembla & SS Holt

FI500M


Issue 02-09/25

@lgood
QUALITY SINCE 1948



Items supplied with Quadaxial Lever Furniture




Items supplied with 9990 locks

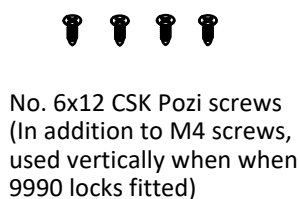

Items supplied with XX9561 Kit

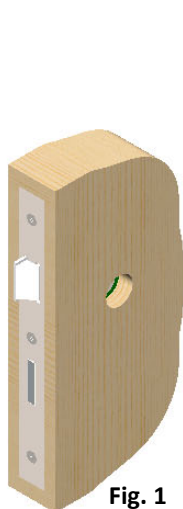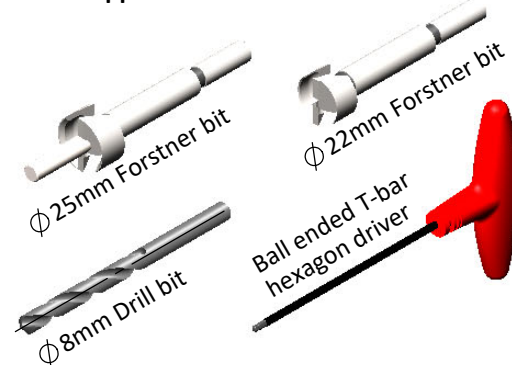


Door prepped with
Ø 25 hole using lock
fitting instructions

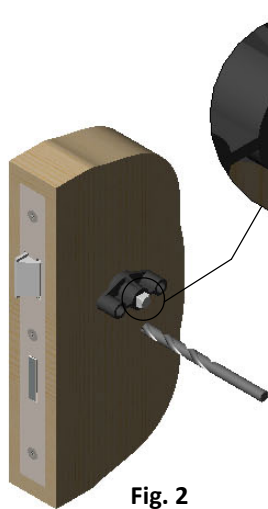


Jig located into Ø 25 hole & over 8mm SQ spindle to drill Ø 8 holes at 38 CRS from both sides of door (ensuring drill does not hit the lock, or spot through approx. 7-8mm deep, remove lock and drill through to lock pocket both sides)





Holes at 38 CRS for
BB fixing

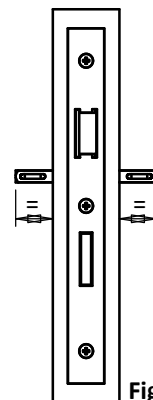


Spindle passed through
lock follower leaving equal
projection to both sides

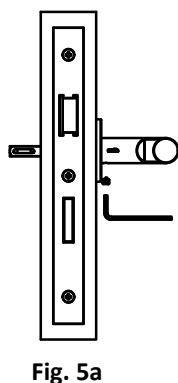


Insert & tighten Grub screw
to one half of lever assy. to
hold spindle central

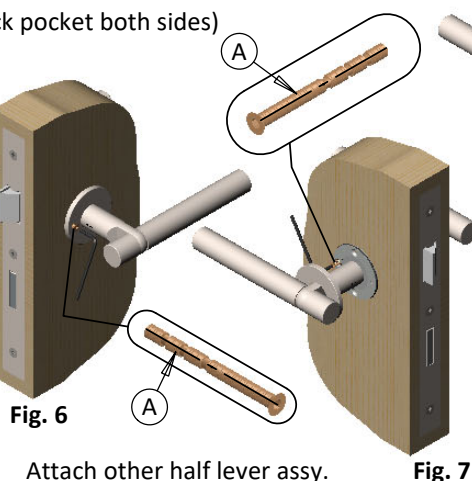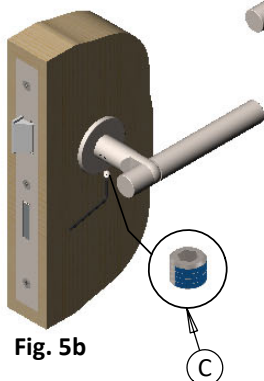

Attach other half lever assy.
to other side of door, slide off
covers, insert & tighten M4
screws back to back both sides,
press covers firmly against door

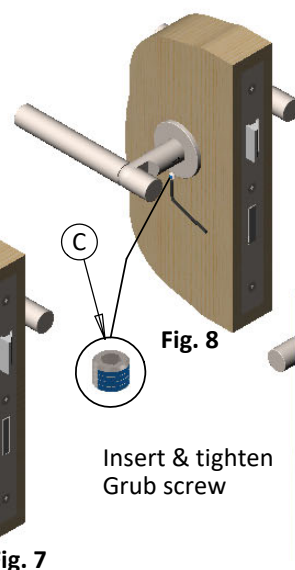

Insert & tighten
Grub screw

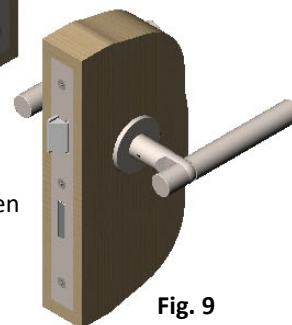

Completed
installation



Recycle responsibly