

Fixing Instructions - 6557 Hook

FI6557
ISSUE 01-06/26

@lgood
QUALITY SINCE 1948

SCREW PACK:

- 1 No. - Nylon Plug **A**
- 1 No. - Fixing Lug **B**
- 1 No. - No. 8x50 Long Wood Screw **C**
- 1 No. - 2.5mm A/F Hexagon Wrench **E**




INSTRUCTIONS:

Fitting to Masonry:

- 1) Drill $\varnothing 7 \times 40$ deep hole at a height as required.
- 2) Insert plug **A** flush.
- 3) Secure Fixing Lug **B** over **Rose** using screw **C**.
- 4) Locate Hook assembly over Lug **B**, fully tighten Grub screw **D** using Hexagon Wrench **E** provided as shown.



For Timber fixing: Drill pilot hole to suit timber and secure Fixing Lug **B** over **Rose** using screw **C** supplied and discard plug.

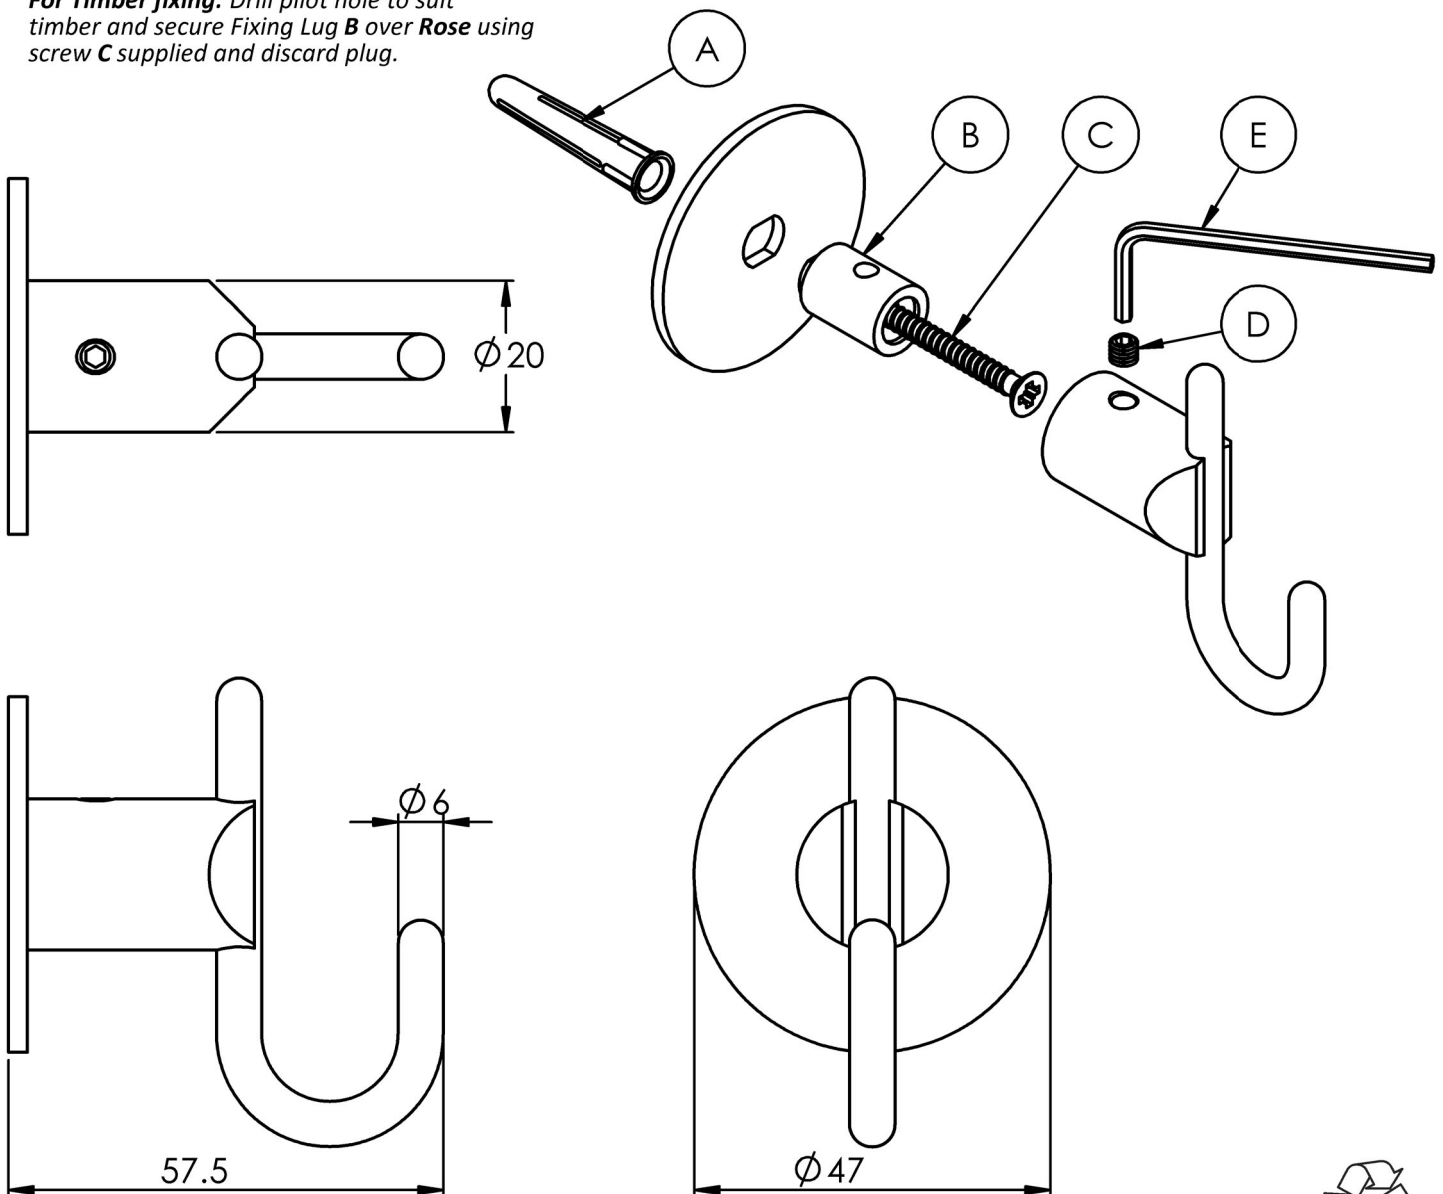

Recycle responsibly