
# Fixing Instructions - 2462 Paper Towel Dispenser

FI2462
ISSUE 03-10/26

**SCREW PACK:**
4 No. - Nylon Plug **A**
4 No. - No. 12x50 Long
. Wood Screw **B**





*Screw driver with 150 long shaft with Pozi point 2 required to tighten screws*


**INSTRUCTIONS:**
1) Drill ∅ 7x50 deep four places CRS as shown below and at a height as required using template ..FT2462 supplied. (For fitting to masonary)
2) Insert plug **A** flush.
3) Screw in screw **B** leaving approx. 5mm gap.
4) Locate assembly over screw heads through keyhole apertures, pull down against surface .
. and fully tighten screws as shown.

*For timber fixing, drill pilot holes to suit timber and screws supplied and discard plugs.*


***Recommended paper towels: 235x80 Z-Fold***

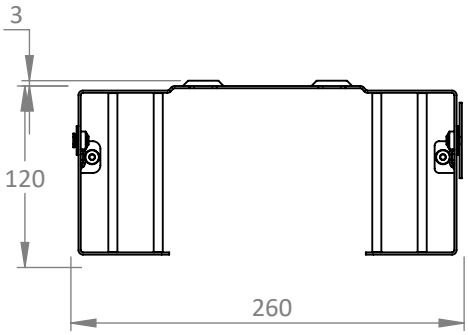

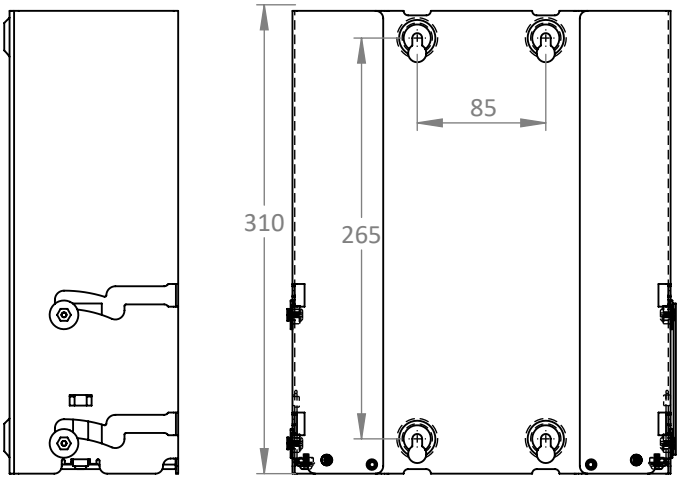


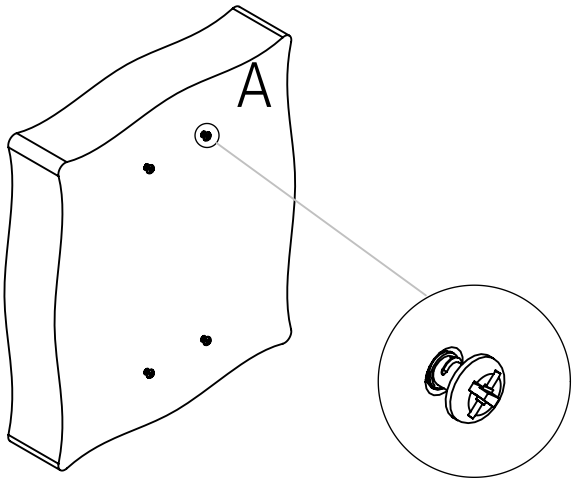
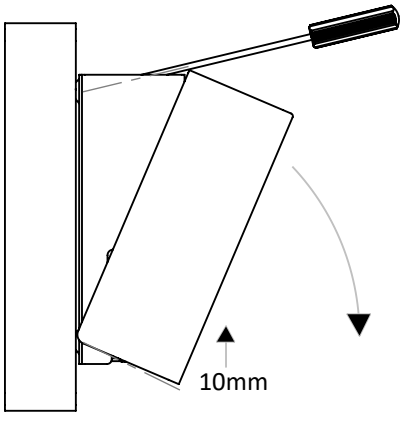

DETAIL A

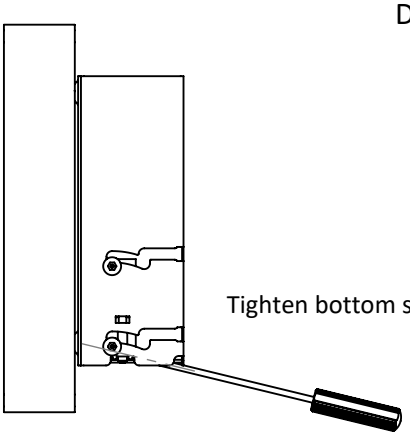

Tighten bottom screws

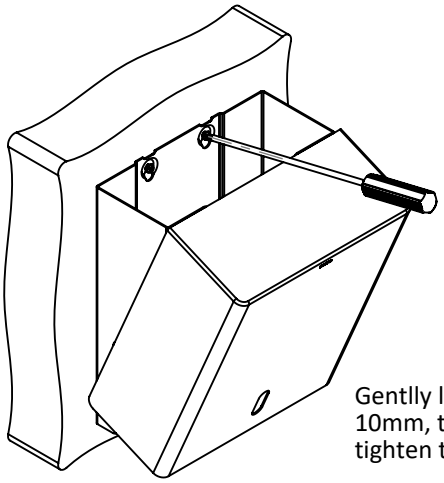

Gentlly lift cover approx 10mm, tilt forward, and tighten top screws




Recycle responsibly