

Fixing Instructions - Holt Pull Handles BB, BT & SFF FIXINGS

FIHO6531
ISSUE 02-10/19

@lgood
QUALITY SINCE 1948

SCREW PACK:

BB HANDLE:

1 No. - 3 A/F HEXAGON .
WRENCH



BT HANDLE:

M10x75 HEX. HD BOLTS



SFF HANDLE:

FIXING LUGS
M10 TYPE D THREADED INSERT
M10X50 HEX SOC SET SCREW
3 A/F HEXAGON WRENCH







GLASS DOOR: SCREW PACK
SUPPLIED ON DEMAND


SFF FIXING -

Drill pilot hole to suit timber for 'Type D' Threaded Insert:
M10 ϕ 12.7-13.1
From small hole for hard wood & up to large hole for soft wood.


10mm A/F Hexagon Wrench required to fasten Threaded Insert into wood.
(not supplied)

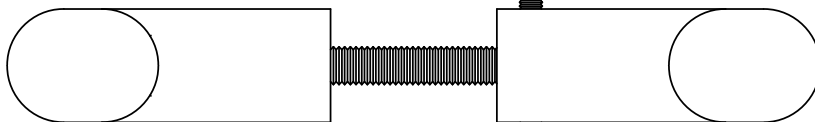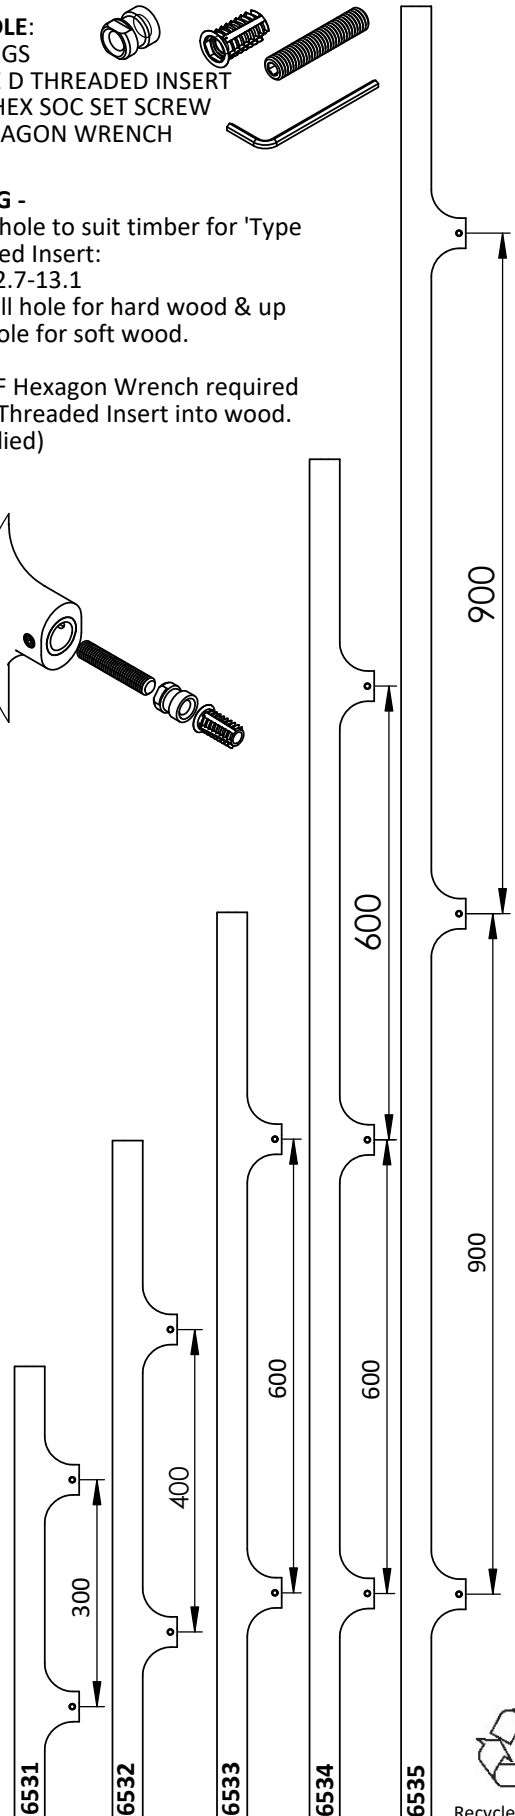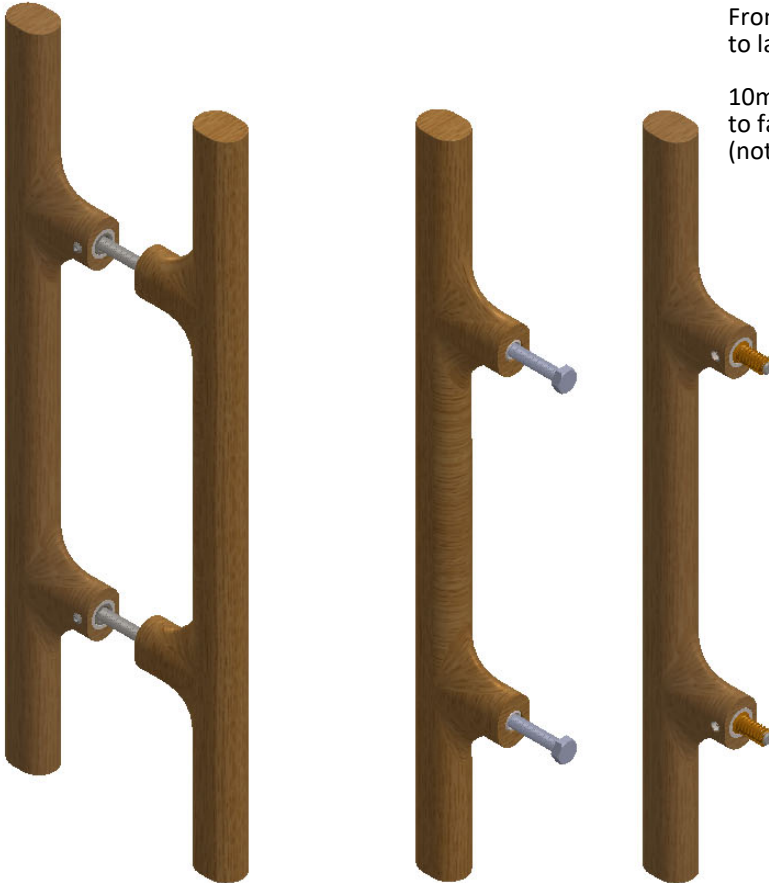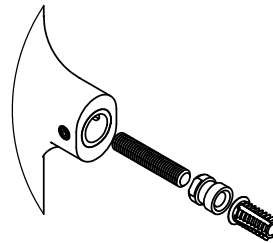

BB FIXING - DRILL HOLE ϕ 10.5 FOR TIMBER & ϕ 13.0 FOR GLASS

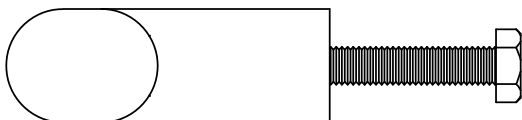

BT FIXING - DRILL HOLE ϕ 10.5 FOR TIMBER & ϕ 13.0 FOR GLASS

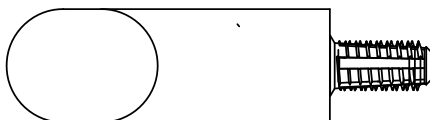

SFF FIXING - SEE DETAILS ABOVE



Recycle responsibly