
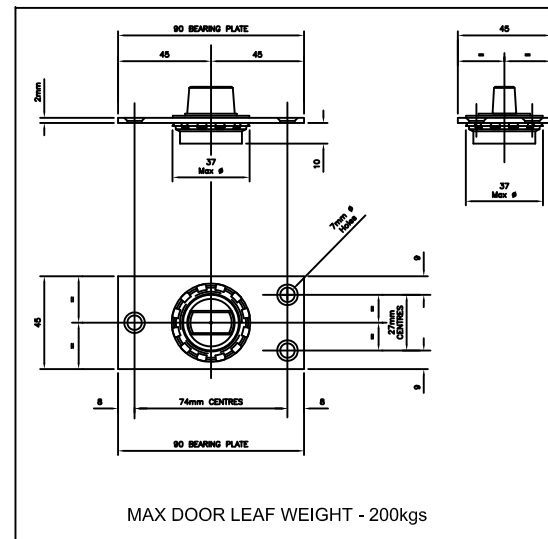
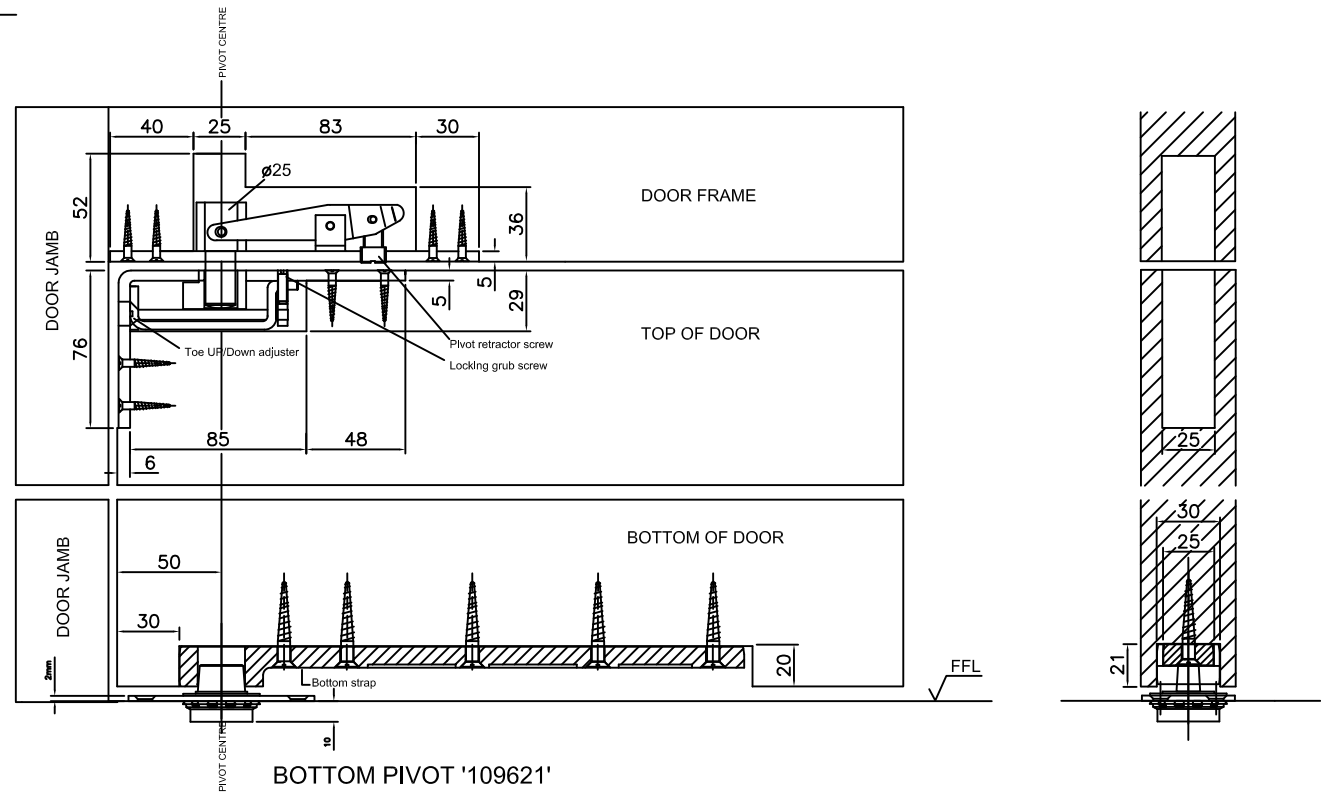
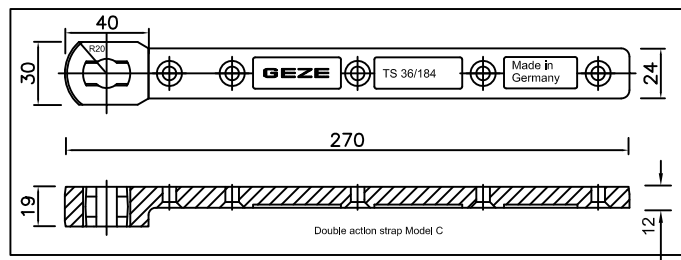
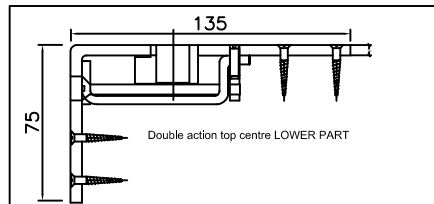



GEZE 6371 TOP CENTRE & 7432 BOTTOM STRAP FIXING FOR TIMBER DOOR & FRAME

FITTING INSTRUCTIONS

1. Cut out frame, door top rail and door bottom rail as per diagram
2. Screw all parts into position with screws provided and retract top pivot
3. Load door onto floor bearing spindle and position under top pivot
4. Lower top pivot into receiving hole
5. Check position of door in relation to frame and adjust accordingly
6. Tighten all clamping screws and top centre grub screw.

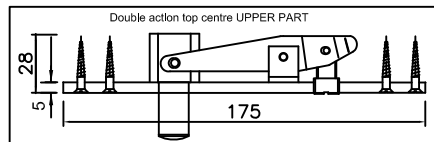

FOR MANUAL DOORS (eg. TS500, TS550)

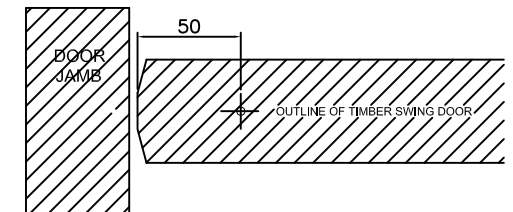

Revision	Drawn	Date	Reason for Change

Drawing No. PIVOT-10				
Title '6371' TOP CENTRE & '7432' BOTTOM STRAP FITTING DETAILS FOR TIMBER SWING DOORS				
Drawn GH	Appd	Scale NTS	Date 30-6-16	
GEZE UK Ltd Blenheim Way Fradley Park Lichfield www.geze.com Staffordshire. TEL 01543 443000 WS13 8SY FAX 01543 443001				

This drawing shows the actual stage of product development at the date indicated. No claims or damages in any form can be made against GEZE as a result of the interpretation of this drawing. This drawing remains the property of GEZE and is made available to the third parties only for the duration of contractual obligations. All rights connected with this drawing remain in possession of GEZE. This drawing may not be copied or handed over to third parties without the express consent of GEZE.