


Fig.28



Fig.29

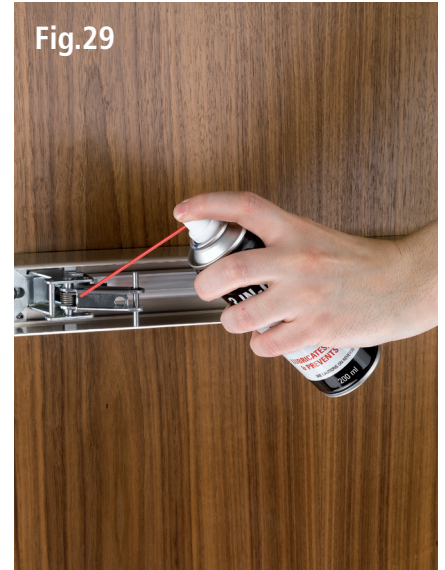

Panic hardware is extremely important in the event of a fire, so it is imperative that regular checks are undertaken to ensure that the device operates correctly.

monthly checks

- Check the panic hardware for dirt and grease and wipe clean as directed in the 'Care of finishes' section (page 19-20).
- Check the operation of device with the door open several times then again with the door closed (Fig.28).
- Ensure that the strikers are free from obstruction and latches are fully extended when in the closed position.
- Remove covers taking care to keep fingers away from moving parts. Check that all moving parts of mechanisms and latches are lubricated (Fig.29).
- Check operation of device with covers removed for any obstructions.
- Check tightness of all fixing



Contego Satin Copper

Wipe clean with a solution of washing-up liquid using a soft cloth or sponge. Rinse and dry with a dry soft cloth. Do not use solvent based or abrasive cleaning materials.

Finish prefix: CS

Antimicrobial
Copper



Contego Polished Copper

Wipe clean with a solution of washing-up liquid using a soft cloth or sponge. Rinse and dry with a dry soft cloth. Do not use solvent based or abrasive cleaning materials.

Finish prefix: CP

Antimicrobial
Copper



Bronze

To protect the bronze items and to maintain a sheen, a regular application of an approved brass polish is required.

Finish prefix: BR



Brass

Polishing is the only way to prevent tarnishing. A weekly polish with a brass cleaner and a soft cloth will allow the brass products to maintain their original state.

Finish prefix: PB



Satin Stainless Steel

Wipe clean with a medium strength detergent or white spirit using a soft cloth or sponge. Rinse and dry with a dry soft cloth. In the event of dirt having accumulated through neglect, application of aerosol lubricant prior to standard cleaning is recommended. A harsh brush should never be used.

Finish prefixes: SS • ST



Polished Stainless Steel

Wipe clean with a medium strength detergent or white spirit using a soft cloth or sponge. Rinse and dry with a dry soft cloth. In the event of dirt having accumulated through neglect, application of aerosol lubricant prior to standard cleaning is recommended. A harsh brush should never be used.

Finish prefixes: PS • SP



Anodised Aluminium

Wipe clean with a solution of washing-up liquid using a soft cloth or sponge. Rinse and dry with a dry soft cloth. Do not use solvent based or abrasive cleaning materials.

Finish prefixes: MA • AS



Colour Coated / PVD

Wipe clean with a solution of washing-up liquid using a soft cloth or sponge. Rinse and dry with a dry soft cloth. Do not use solvent based or abrasive cleaning materials.

Finish prefixes: TA • BF • BS • BD • BL • BT • GT