


Fixing Instructions For: Face Fixed Lever Furniture

FI500T
Issue 02-09/25

@lgood
QUALITY SINCE 1948

Items supplied with Quadaxial Lever Furniture

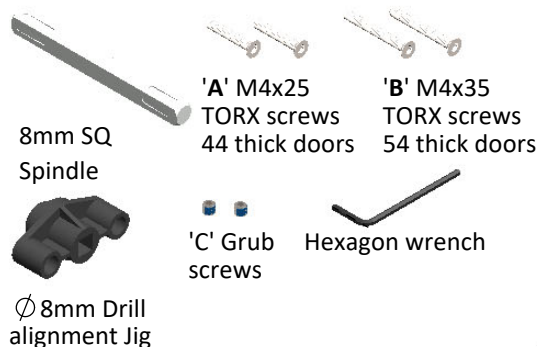

Items supplied with XX9561 Kit

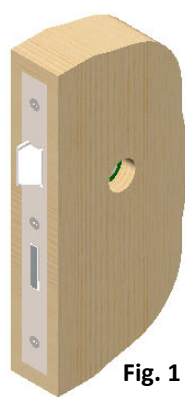
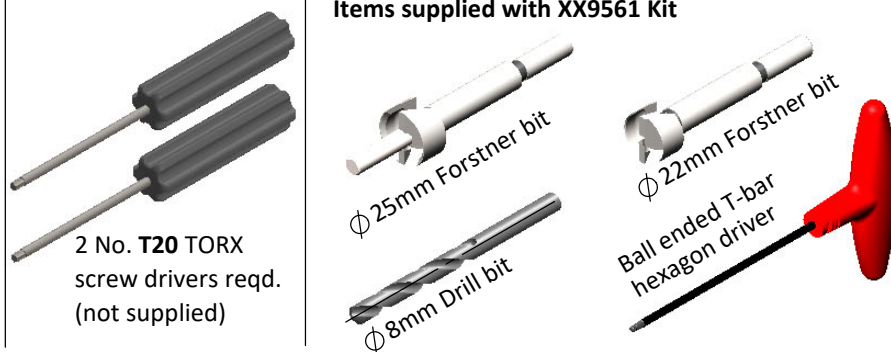


Fig. 1

Door prepped with
Ø 25 hole using lock
fitting instructions

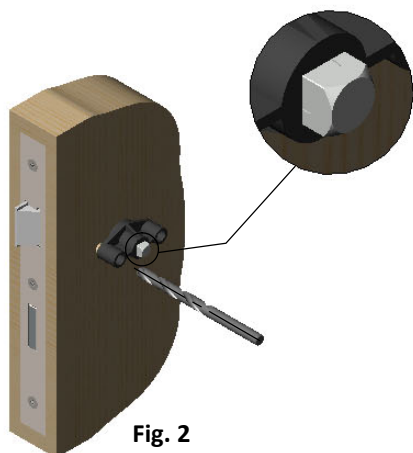


Fig. 2

Jig located into Ø 25 hole & over 8mm SQ spindle to drill Ø 8 holes at 38 CRS from both sides of door (ensuring drill does not hit the lock, or spot through approx. 7-8mm deep, remove lock and drill through to lock pocket both sides)



Fig. 3

Holes at 38 CRS for
BB fixing

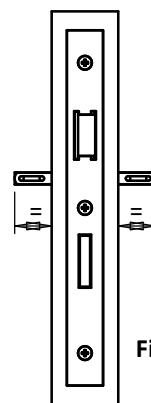


Fig. 4a



Fig. 4b

Spindle passed through
lock follower leaving equal
projection to both sides

One side of Lever Sub Assy.
with BB pummels fixed with
M4 TORX screws

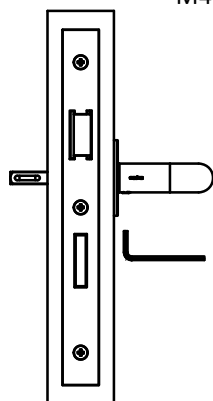


Fig. 5a

Insert & tighten Grub screw
to one half of lever assy. to
hold spindle central

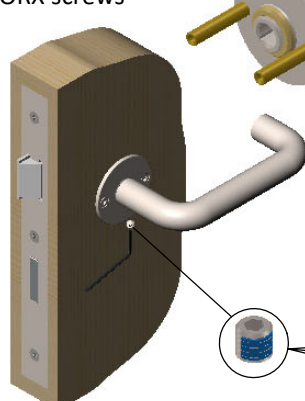


Fig. 5b

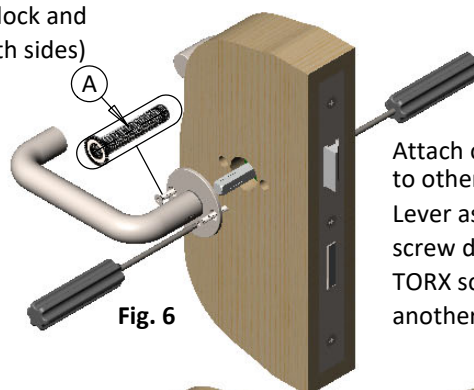


Fig. 6

Attach other half lever assy.
to other side of door, grip first
Lever assy. screws with one TORX
screw driver, insert & tighten M4
TORX screws back to back with
another screw driver

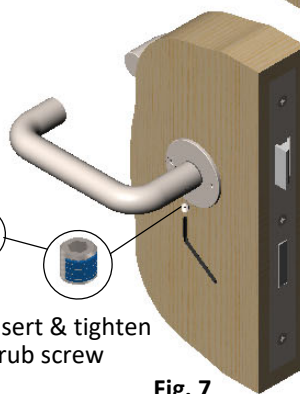


Fig. 7

Insert & tighten
Grub screw

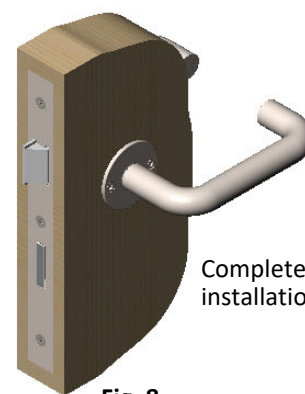


Fig. 8

Completed
installation



Recycle responsibly